

SERIES 9900 WIRELESS INTERCOM SYSTEM



MARINE INTERCOM

U9921-GUV

LINKING INSTRUCTIONS



SERIES 9900 WIRELESS INTERCOM SYSTEM



The Universal Gateway...

...is capable of linking up to six (6)
Belt Stations at a time...

...the first four (4) of which being
connected with full-duplex audio



SERIES 9900 WIRELESS INTERCOM SYSTEM



The last two (2) Belt Stations will each remain linked in ***stand-by mode***...

...until one of the connected Belt Stations drops out of the system...

...at which time the Gateway **automatically connects to the first stand-by unit it finds within range.**



SERIES 9900 WIRELESS INTERCOM SYSTEM



The following shows how to link an unconnected Belt Station to a Gateway that has less than six (6) Belt Stations currently linked:



SERIES 9900 WIRELESS INTERCOM SYSTEM



First, turn on the Belt Station by pressing the power button on the side of the unit (the Gateway will also need to be powered-up for linking.)



POWER
BUTTON

The LED indicator will turn **solid red** for a few seconds, then blink slowly on **orange**, indicating an idle, disconnected state.



SERIES 9900 WIRELESS INTERCOM SYSTEM

Next, place the Belt Station within (1) to three (3) feet of the Gateway...



← 1-3 feet →



...being careful not to place the units too close together, as this may cause saturation and prove unsuccessful.



SERIES 9900 WIRELESS INTERCOM SYSTEM

Finally, press and immediately release the PTT button on the Belt Station and the power button on the Gateway at the same time.



PTT BUTTON



POWER
BUTTON



The LED indicator will now turn **solid red** when linked, blink fast on **orange** while searching, then blink slow on **green** briefly, indicating an established connection.



SERIES 9900 WIRELESS INTERCOM SYSTEM

The Gateway's LED will slowly blink **green** once for each Belt Station linked.



A voice prompt can now be heard through the users headset, "Connection Established"



SERIES 9900 WIRELESS INTERCOM SYSTEM

If there were less than four (4) Belt Stations connected prior to linking, your Belt Station will now be connected with full-duplex audio.



You have now achieved a “strong link”. Each time your Belt Station is shut down and powered back up again, your link to the Gateway will remain until deliberately purged.

