



**SERIES 9900 WIRELESS INTERCOM SYSTEM**

**VEHICLE INTERCOM**

**U9922-G38**

**PURGING INSTRUCTIONS**



## SERIES 9900 WIRELESS INTERCOM SYSTEM

First, turn off the Belt Station power by pressing the power button on the side of the unit



POWER  
BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM

Next, push and hold the PTT switch on the front of the unit.



PTT BUTTON



## SERIES 9900 WIRELESS INTERCOM SYSTEM



Then, push and **hold** the power button, powering the unit up, **while continuing to hold the PTT switch**



## SERIES 9900 WIRELESS INTERCOM SYSTEM



To complete the process, **when the LED indicator turns red, release the power button...**



PTT BUTTON

POWER  
BUTTON

...then release the PTT switch. The LED indicator will **flash red** For 15 to 20 seconds, followed by a voice prompt, "Connection Deleted."



## SERIES 9900 WIRELESS INTERCOM SYSTEM



The 3800 Gateway also allows for a '*smart purge*'.

This would involve a scenario involving a system with more than four (4) Belt Stations linked to a Gateway.

In such a scenario, a smart purge would achieve a purge of only those Belt Stations linked but not connected with full-duplex audio.



## SERIES 9900 WIRELESS INTERCOM SYSTEM

To execute a smart purge, hold the link button for about 30 seconds, until the LED blinks **red**, indicating a lost connection.



LINK  
BUTTON

A voice prompt can now be heard through all Headsets connected to linked-but-unconnected Belt Stations, "Connection Deleted."



## **SERIES 9900 WIRELESS INTERCOM SYSTEM**



The purged Belt Stations are now ready to link again, when needed, to any 9900 Series Gateway.

